

How to attach the latch to secure your bin lid

1

Slide the latch under the bin lid handle, hook side facing down.




2

Bring the rounded end through the latch slot and pull through.



3

Ensure the 'S-flex' is completely through the slot.

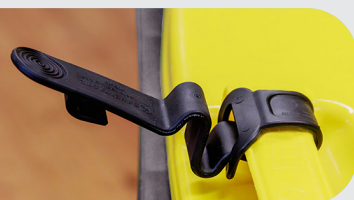

4

Secure the hook underneath the rim of the bin.



Things to know:

- For the latch to work correctly the bin needs a minimum content weight of 2kgs.
- Use only one latch per bin.
- Contents may still spill if the bin tips over.



Find out more
03 941 8999

ccc.govt.nz/mybins